

| | | | | | | | | | | |
|---------------------------------------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| Burner Motor - hp | 1/5 | 1/5 | 1/5 | 1/5 | 1/5 | 1/5 | 1/3 | 1/3 | 1/3 | 1/3 |
| Fuel Pump connection (3/4" or larger) | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT | 1/4 NPT |
| Weight - in pounds | 52 | 52 | 52 | 52 | 52 | 52 | 80 | 80 | 80 | 80 |

Shipped with Burner

| | | | | | | | | | | |
|--|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Boiler Door Modifications | | | | | | | | | | |
| Spare fuses - one 4 amp, one 7 amp, one 10 amp | | | | | | | | | | |
| Instruction Manual for burner | | | | | | | | | | |
| Stainless inserts for boiler | | | | | | | | | | |
| Spare filter for vapor eliminator | | | | | | | | | | |
| Maintenance schedule & log | | | | | | | | | | |
| Tjernlund Draft Inducer, model | D-3 | D-3 | I | I | | | | | | |
| Exhausto Blower System, blower size: | | | | | 160 | 160 | 160 | 160 | 160 | 180 |
| Exhausto connection size | | | | | 6" | 6" | 6" | 6" | 6" | 8" |
| Exhausto pressure settings ** | | | | | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 | 0.1 |
| Regulator Assembly | | | | | | | | | | |
| Shipping weight - in pounds (of above) | 100 | 100 | 100 | 100 | 120 | 120 | 120 | 130 | 130 | 140 |
| Floating Oil Pickup / Filter Assembly, includes filter mount with bypass filter, floating oil pickup, 2" fitting for tank & checkvalve | | | | | | | | | | |
| ** Optional boost pump, includes filter mount with non-bypass filter, & oil strainer & excludes floating oil pickup | | | | | | | | | | |

On-site items required for burner (not supplied by INOV8)

- Oil line from tank
- Return line to tank
- Compressed Air supply line
- Chimney
- Oil storage tank (minimum size)
- Electrical supply